

## Secure Diagnostic Access (SDA)

### Registration and initial log-in

- Internet connection required
- Personal e-mail address required
- A license for the "Esi" (control unit diagnosis) type of information has been obtained

### Creating a Bosch ID

The Bosch ID is the central key to many Bosch apps. All that is needed now are an e-mail address and a password to log into many of the products and services provided by a range of Bosch divisions. If a Bosch ID already exists, registration can be skipped and the existing log-in details can be used.

Due to the vehicle manufacturers' requirements, every user of SDA must use their own Bosch ID. It is not permitted to share log-in details.

1. Select " (main menu) >> Settings >> Secure Diagnostic Access (SDA)".

2. Select <REGISTER>.

The "Register your Bosch ID" window is displayed.

3. Enter your e-mail address.

Only use personalized email addresses and passwords for registering the Bosch ID. Do not use e-mail addresses that can be accessed by more than one person, since only one successfully completed online user identification by means of an ID document can be assigned to each e-mail address / Bosch ID, for example.

4. Enter the password.

Password requirements:

At least one number.

At least one uppercase letter.

At least one special character.

At least 10 characters long.

5. Enter the new password again.

6. Activate the option I agree to the TCB. I also confirm that I have taken note of the data protection notices.


7. Select <Register>.

The "Welcome to Bosch" window is displayed.

To enable the Bosch ID, an e-mail is sent to the e-mail address specified.

8. Select <Activate user account> in the e-mail received.

If you do not see the e-mail, check your spam and junk folders.

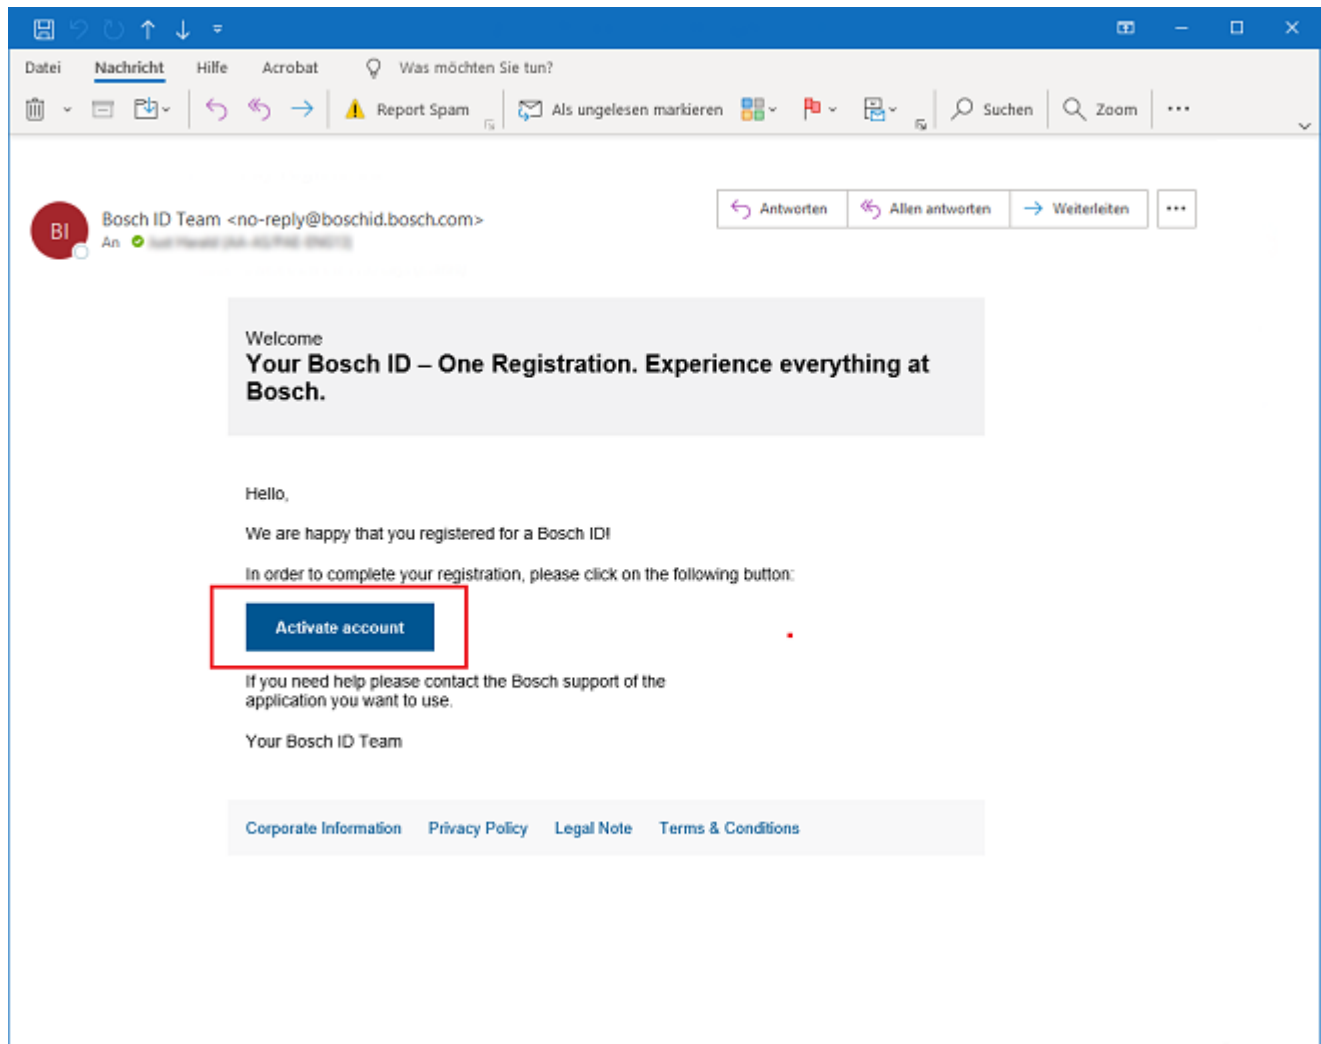

Registration completed successfully.

Logging into SDA for the first time with the Bosch ID

1. Select " (main menu) >> Settings >> Secure Diagnostic Access (SDA)".
2. Select <LOG IN>.
 

An input window is displayed.
3. Enter your first name and surname.
4. Select <Continue>.
 

An input window is displayed.
5. Select all options.
6. Select <Continue>.
 

The following message appears: Log in successful.  
Access to protected systems and functions is possible.

In the main-menu bar, is displayed.
7. Close the window, and conduct a diagnosis of protected systems and functions with <Exit>.